



Intelligent 9 Flash Duplicator

Quick Guide


(Silver/Golden Series)

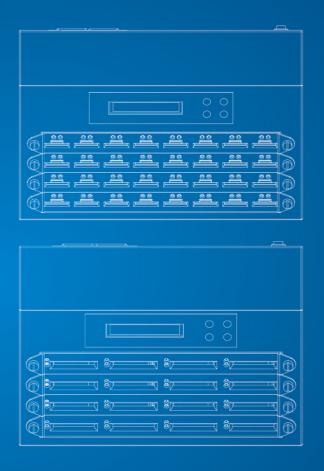


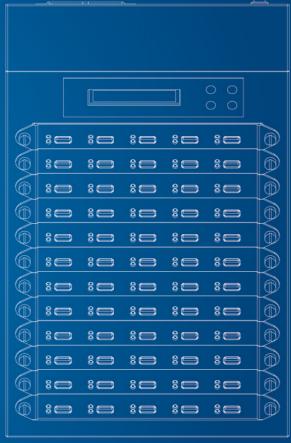

ご使用の前に

- コピー元になるソースデバイスが正常に動作することをご確認ください。
- コピー元デバイスとコピー先デバイスの容量が同一であることを推奨します。
- データの正確性を担保するために、「コピー&コンペア」を使用することを推奨します。
- コピーなどの処理中に電源をオフにしないでください。

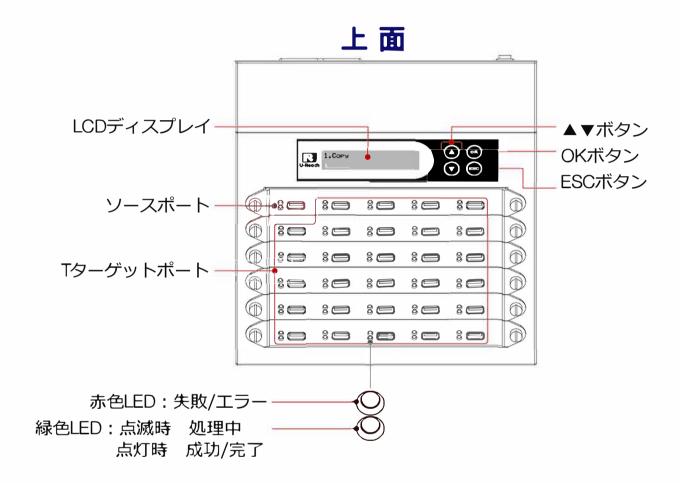

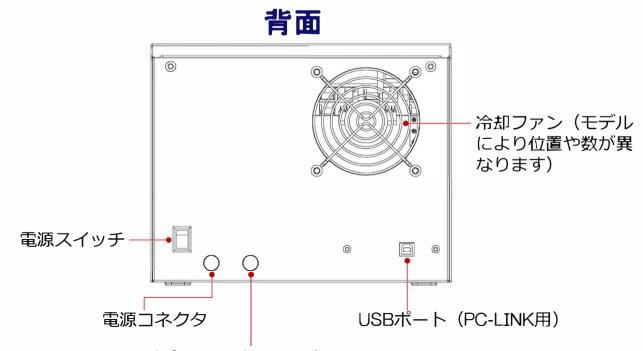

追加電源コネクタ(ポート数が多いモデルにのみ搭載されています)


コピーの実行方法

用意するもの


■ 換気の良い清潔な環境 静電気にご注意ください。




2 正しく動作する コピー元デバイス




3 正しく動作する コピー先デバイス



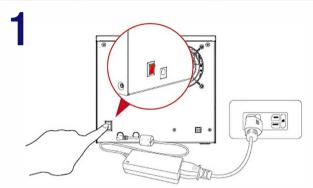

電源ケーブルを接続し、電源を オンにします。



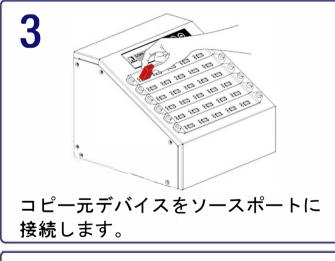







結果が表示されたらコピー完了です。

機能一覧 Silver シリーズ

- 1. Copy
- 2. Compare
- 3. Copy&Compare

4. Media Check

- 4.1 H3 Safe
- 4.2 H5 RW
- 4.3 H6 SafeRW
- 4.4 Setup Range %
- 4.5 Setup Range MB
- 4.6 Set ErrorLimit
- 4.7 Minimum Read Speed
- 4.8 Minimum Write Speed
- 4.9 Set Capacity Limit
 - 4.9.1 Set Upper Limit
 - 4.9.2 Set Lower Limit
 - 4.9.3 Clear Limit

5. Information

- 5.1 USB Info.
- 5.2 System Info.

6. Utility

- 6.1 Do Format
 - 6.1.1 Auto Format
 - 6.1.2 FAT16 Format
 - 6.1.3 FAT32 Format
 - 6.1.4 Set FAT 16 Cluster Size 6.1.5 Set FAT 32 Cluster Size
- 6.2 Measure Speed
- 6.3 Capacity Check
- Quick Erase 6.4
- 6.5 Full Erase
- 6.6 DoD Erase
- System Update 6.7
- 6.8 Calc. CRC64
- 6.9 A2 Fake Picker

7. Setup

- Start-up Menu 7.1
- 7.2 Copy Area

7.2.1 System and Files 7.2.2 Whole Media

- 7.3 Button Sound
- 7.4 Target Tolerance
- 7.5 Asynchronous
- Check Before Copy 7.6
- 7.7 Power Off Time Between Copy & Compare
- 7.8 Auto Start After Fill Device
- 7.9 Language
- 7.10 Select Speed
- 7.11 Set HDD Mode
- 7.12 Monitor Device After Copy
- 7.13 Advanced Setup
- 7.14 Set to Default

※各機能の詳細はそれぞれのモデルの取扱説明書を ご参照ください。

Golden シリーズ

- 1. Copy
- 2. Compare
- 3. Copy&Compare

4. Media Check

- 4.1 H3 Safe
- 4.2 H5 RW
- 4.3 H6 SafeRW
- 4.4 Setup Range %
- 4.5 Setup Range MB
- 4.6 Set ErrorLimit
- 4.7 Minimum Read Speed
- 4.8 Minimum Write Speed
- 4.9 Set Capacity Limit
 - 4.9.1 Set Upper Limit
 - 4.9.2 Set Lower Limit
 - 4.9.3 Clear Limit

5. Information

- 5.1 USB Info.
- 5.2 System Info.

6. Utility

- 6.1 Do Format
 - 6.1.1 Auto Format
 - 6.1.2 FAT16 Format
 - 6.1.3 FAT32 Format
 - 6.1.4 Set FAT 16 Cluster Size
 - 6.1.5 Set FAT 32 Cluster Size
- 6.2 Measure Speed
- 6.3 Capacity Check
- 6.4 Quick Erase
- 6.5 Full Erase
- 6.6 DoD Erase
- 6.7 System Update
- 6.8 Calc. CRC64
- 6.9 A2 Fake Picker
- 6.10 Write Protect
 - 6.10.1 Set Write Protect

7. Setup

- 7.1 Start-up Menu
- Copy Area 7.2
 - 7.2.1 System and Files
 - 7.2.2 Whole Media
- 7.3 Button Sound
- Target Tolerance 7.4
- 7.5 Asynchronous
- 7.6 Check Before Copy

7. Setup

- 7.7 Power Off Time Between Copy&Compare
- 7.8 Auto Start After Fill Device
- 7.9 Language
- 7.10 Select Speed
- 7.11 Set HDD Mode
- 7.12 Monitor Device After Copy
- 7.13 Adjust Clock
- 7.14 Use Port 2 as Compare Source
- 7.15 Advanced Setup
- 7.16 Set to Default

8. Burn-In

- Burn-In (Copy&Comp) 8.1
- 8.2 Burn-In (Auto Data)
- 8.3 Set Burn Time
- 8.4 Set Loop Count
- 8.5 Set Test Range
- 8.6 Set Bad Limit
- Set Data Pattern 8.7
- 8.8 Compare Count Per Loop
- 8.9 Power Off Between Loop
- 8.10 Compare Count Per Copy

9. Log Manager

- 9.1 Out Today Report
- 9.2 Out Recent Report

9.4 Advanced Function

- 9.3 Out Period Date
 - 9.4.1 Clear ALL Log

9.4.2 Setup Password:

10.Write Protect

- 10.1 Copy+Write Protect
- 10.2 Copy+Comp+WriteP.
- 10.3 Set Write Protect

※機能は予告なく変更、追加されることがあります。 予めご了承ください。



製造されたすべての製品が、出荷前に厳格な品質テストを実施したことを保証します。 製品の品質やお気づきの点がございましたら弊社のグローバルサービス ネットワークにお気軽にご連絡ください。

The Data Equipment Expert

Duplication / Inspection / Sanitization

Taiwan (info@ureach-inc.com)

TEL: +886-2-2653-5818 FAX: +886-2-2653-4203

ADD: 5F, No. 4, Lane 50, Sec. 3, Nangang Rd., Taipei 115, Taiwan.

USA (info@ureach-usa.com)

TEL: +1-909-628-7030 ADD: 3340 Riverside Dr., Suite C, Chino, CA. 91710

Europe (info@u-reach.eu)

TEL: +49-(0)6222-938823 ADD: Ludwig-Wagner-Strasse 19 D-69168 Wiesloch Germany

日本 (info@ureach.co.jp)

TEL: 03-5335-9747

ADD: 167-0051 東京都杉並区荻窪4-21-12

China (info@ureach.cn)

Beijing

TEL : +86-10-6231-3103

ADD: Room 300, No.30, Kegun East Building, Xueyuan Road, Haidian District, Beijing.

Shanghai

TEL: +86-21-3468-8195

ADD: Room 502, No.11, 56 Zhi Lane, Lane 8889, Zhongchun Road, Minhang District, Shanghai.

Shenzhen

TEL: +86-755-2591-6981

ADD : Room 2C, Building B, Shayuanpulndustrial Zone,

Minzhi Blvd. Longhua District, Shzenhen.